


Setup ReadyNAS® for FTP with User Home Folders

Follow these simple steps in the Setup Wizard to add new user accounts and configure them for FTP remote access:

Step 1. Configure the Security mode to "User"

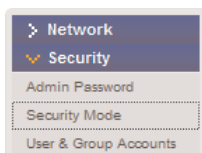


- ☒ **User.** Fit for medium-size office or workgroup. Select this option if you would like to control access to shares based on user or group accounts and your network does not utilize a domain controller for authentication. If you select this option, you will need to create a user account for anyone accessing this device. This option supports setting disk quotas on a per-user or per-group basis.

Workgroup:

Step 2. Add the User Accounts


Select **"User & Group Accounts"** from the drop-down menu to add new user accounts. For each account, enter the user's name, email, UID, and password. Also, assign each user to a group, using the **"Primary Group"** pull-down list. Optionally, you can assign a disk quota to each user. Select **"Apply"** to save all changes.

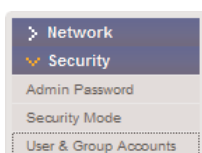

User	Email	UID	Primary Group	Password	Quota (MB)
User1			users		
User2			users		

Step 3. Configure the FTP Service

Select the **"Services"** tab, then **"Standard File Protocols"** from the pull-down menu. Choose **"FTP"** from the list of supported services.

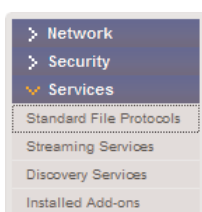

- ☒ **FTP**, or File Transfer Protocol, used extensively for basic file upload and downloads. If you will be making FTP service available to this device outside the firewall, you can specify a custom port for added security.

Port:
 Authentication mode:
 Allow upload resumes:
 Passive ports: -
 Masquerade as:

Set **"Authentication mode"** to **"User"**

Set a range of ports (e.g., 5000 to 5020)

Set **"Masquerade as:"** to be a static public IP or dyndns address

Step 4. Allow "User Home Shares" over FTP

From the "Security" drop-down menu, select "User & Group Accounts". Ensure "Make home shares available over FTP" is enabled.

Step 5. Configure the Firewall

In a NETGEAR firewall, configure the following for inbound FTP:

First, create a new service for the passive port range:

Custom Services Table							help
	#	Name	Type	Start Port	Finish Port	Priority	Action
☐	61	NAS	TCP	5000	5020	Normal-Service	edit

Then, add standard FTP and the new defined service as inbound firewall rules for the ReadyNAS:

Inbound Services										help
	!	Service Name	Filter	LAN Server IP Address	LAN Users	WAN Users	Destination	Bandwidth Profile	Log	Action
☐		FTP	Allow Always	192.168.1.200		ANY	ADSL	NONE	Never	up down edit
☐		NAS	Allow Always	192.168.1.200		ANY	ADSL	NONE	Never	up down edit

Once configured, use an FTP client application to connect to the remote ReadyNAS by typing for example: <ftp://my.dyndns.org>. Or, if the public IP is statically assigned to the firewall for example, use: <ftp://200.200.200.10>.

Once connected, you will be presented with a login screen. To authenticate, enter the username and password combination from "Step 2", above.

Once authenticated, users will be able to remotely access shared folders and files residing on the ReadyNAS. Each user will only be able to view and access shares to which he has been granted permission.

NETGEAR, the NETGEAR logo, Connect with Innovation and ReadyNAS are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Other brand names mentioned herein are for identification purposes only and may be trademarks of their respective holder(s). Information is subject to change without notice. © 2010 NETGEAR, Inc. All rights reserved.